


# montážní návod / installation instruction

FA900/FA1200/FB900/FB1200

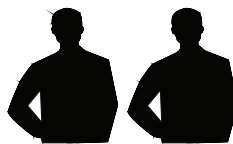



**polysan** 

Polysan s.r.o.



Nesměřice 52

285 22 Zruč nad Sázavou

www.polysan.cz




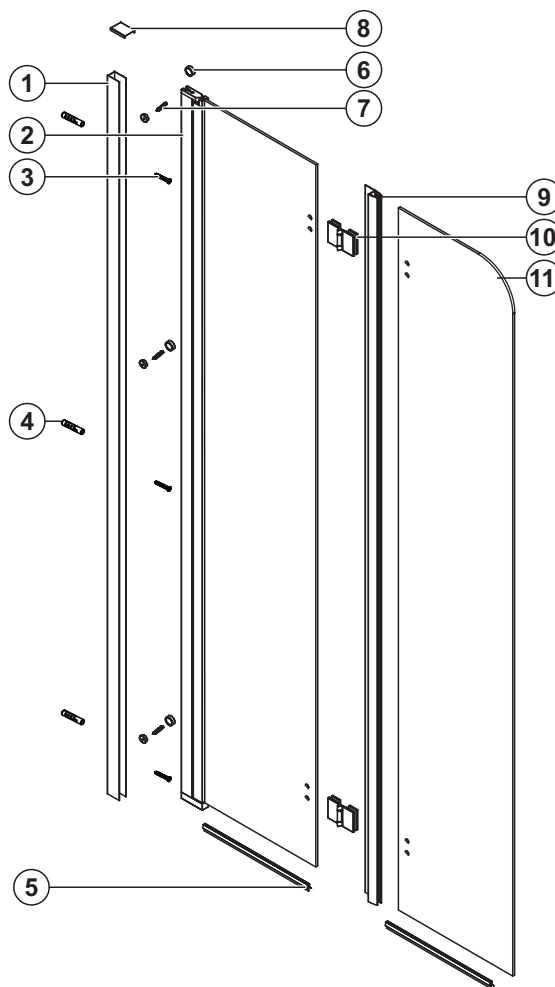
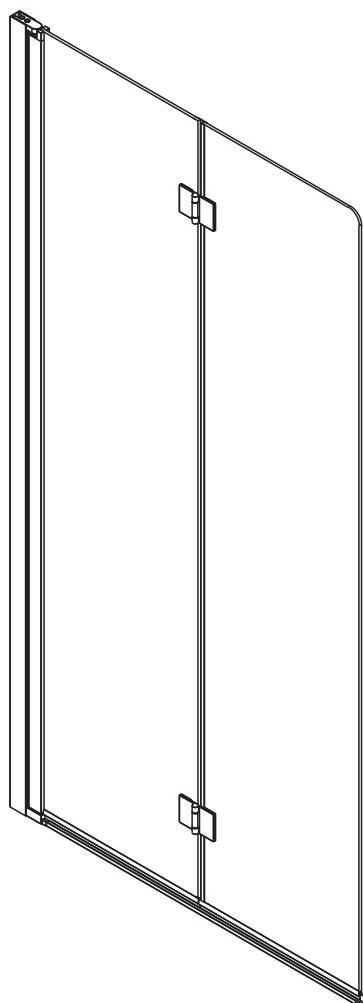


## TOOLS




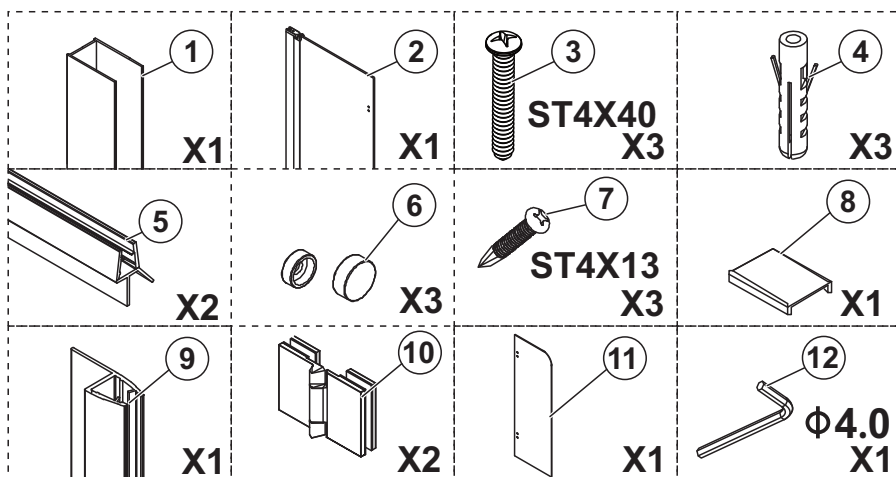
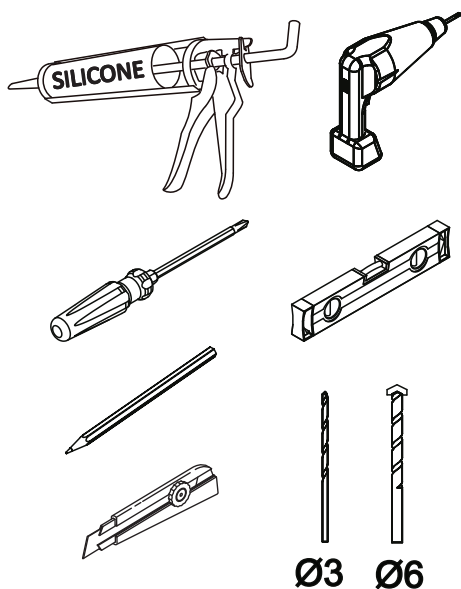


# ATTENTION

Upside down the vertical gasket for R door opening

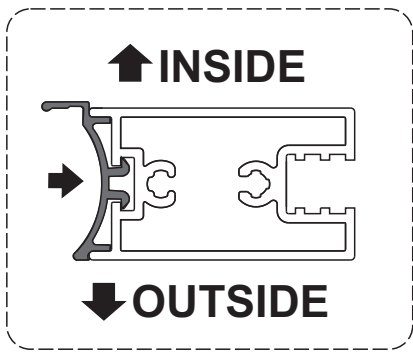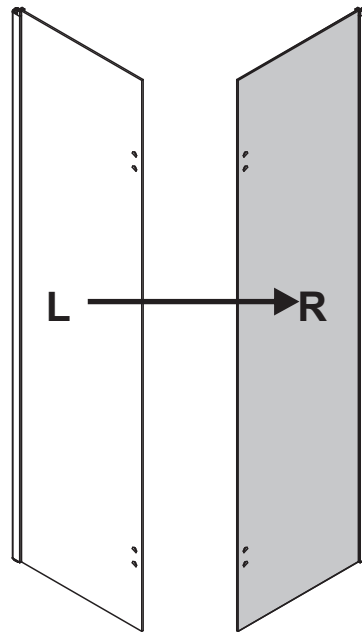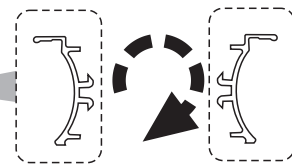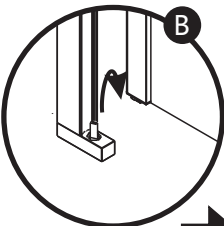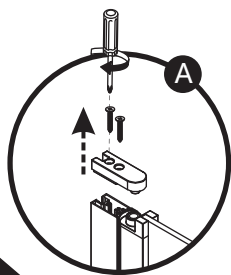


1

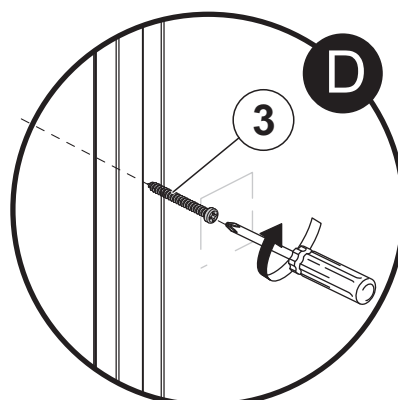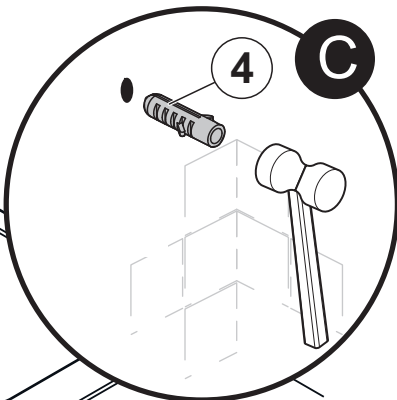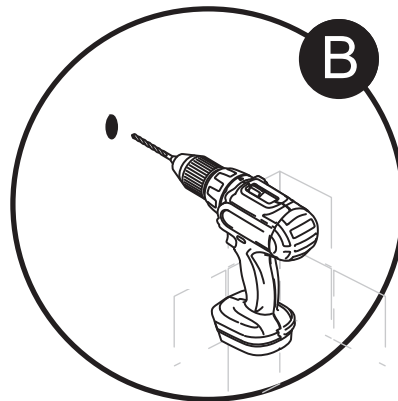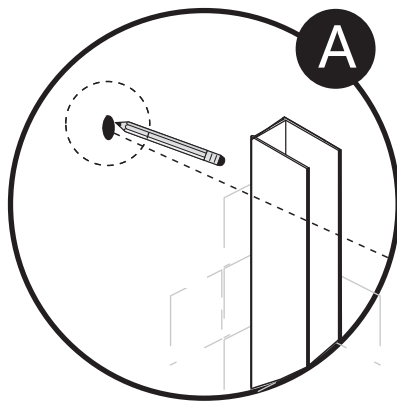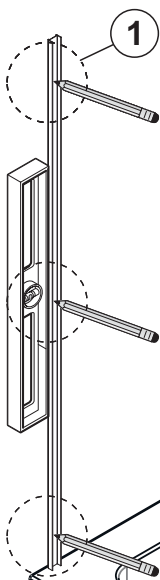


2

2

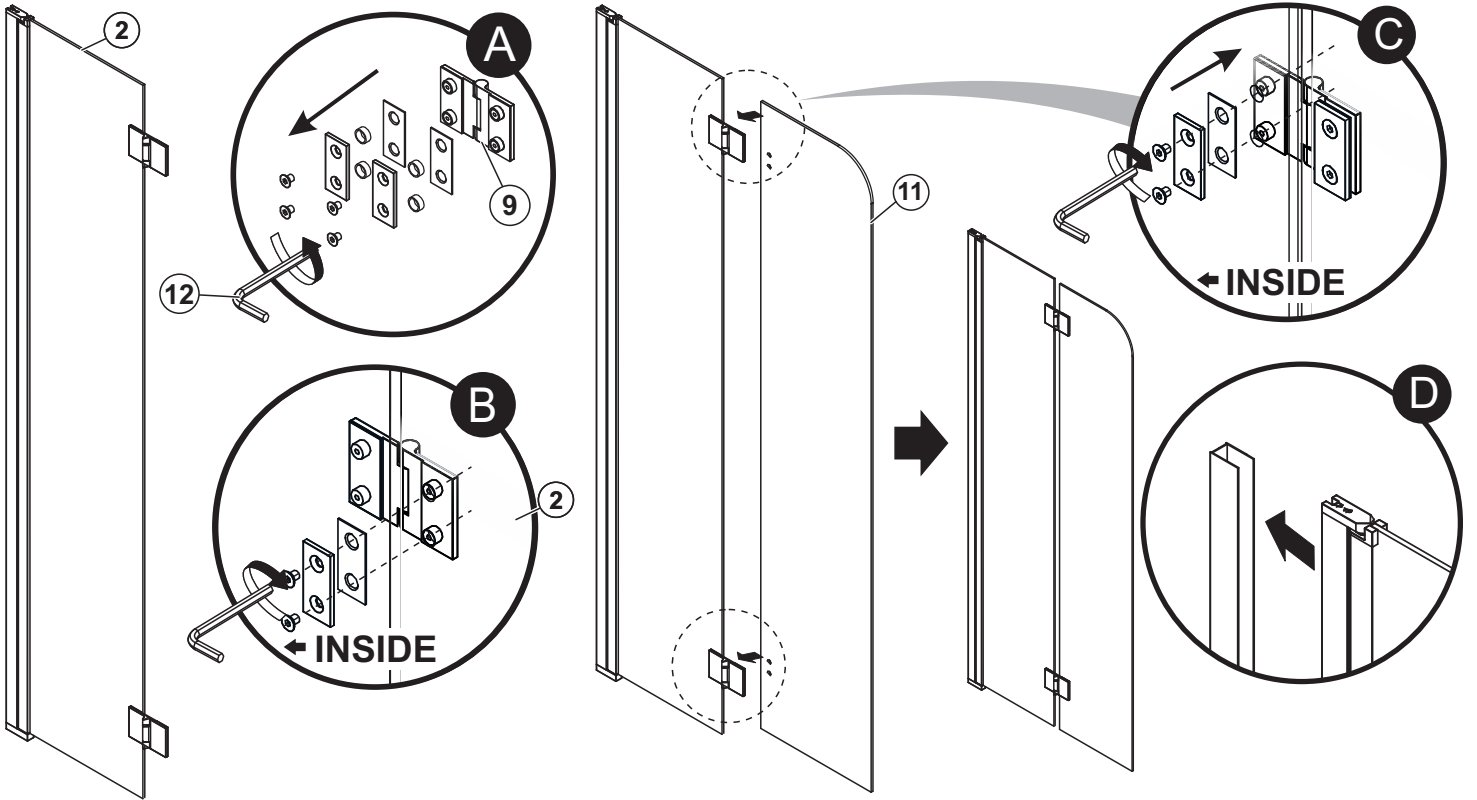

3

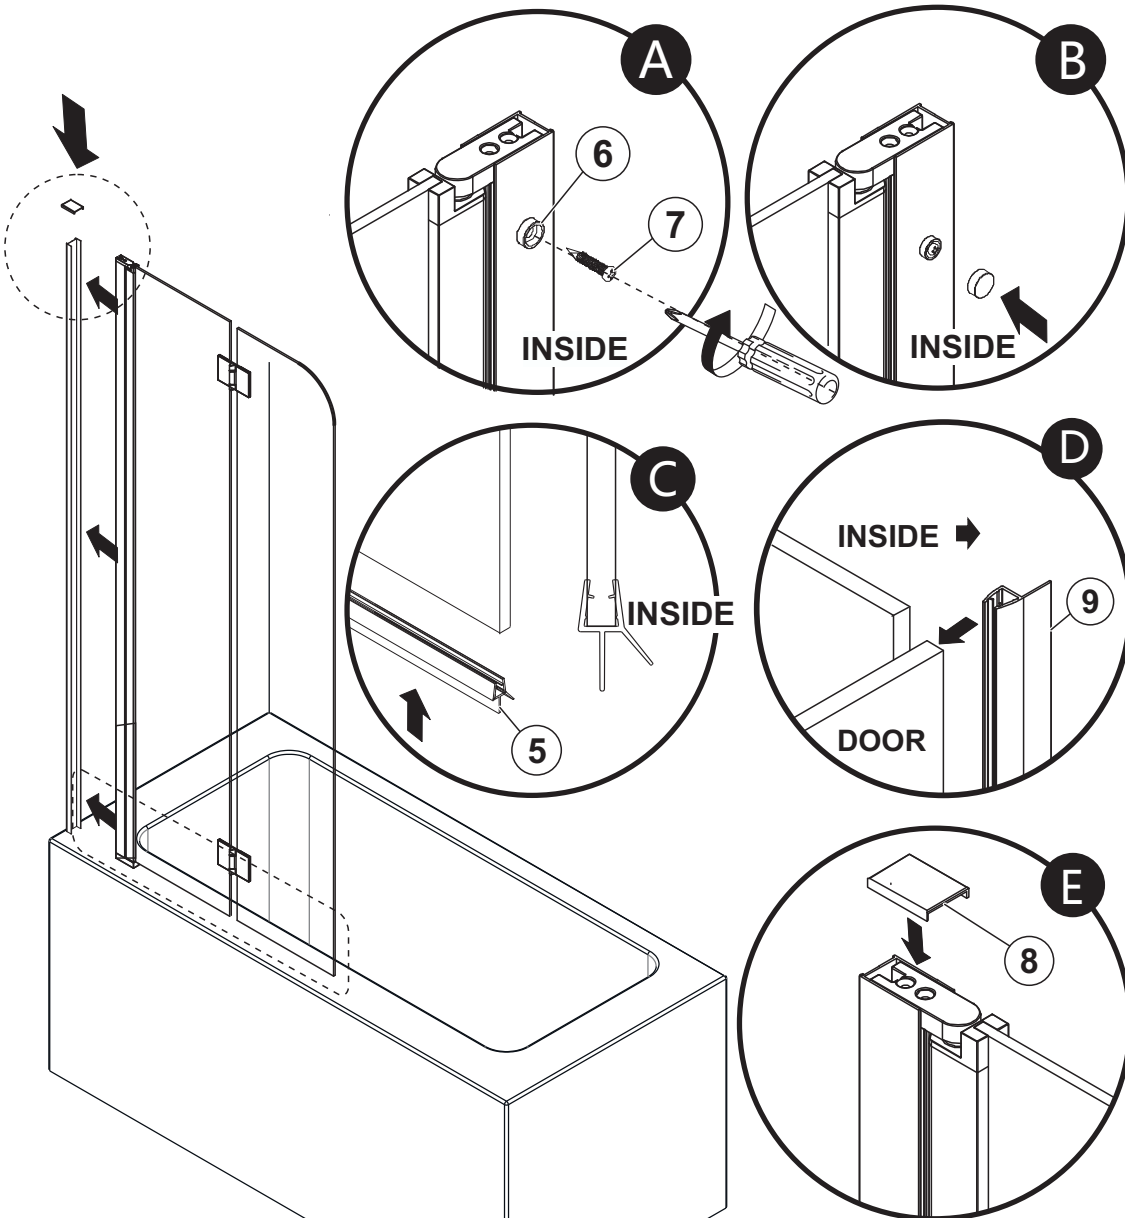

3

